

BLE Heart Rate Collector

1.0

Features

- BLE Heart Rate Profile support in the Client GATT role
- Indication of the Heart Rate data through UART
- LED status indication

General Description

This example project demonstrates the BLE Heart Rate Collector workflow. The project receives Heart Rate data from any BLE enabled Heart Rate Sensor and indicates that data on any terminal software via UART.

Development Kit Configuration

Default CY8CKIT-042 BLE Pioneer Kit configuration.

Project Configuration

BLE Heart Rate Collector Example project

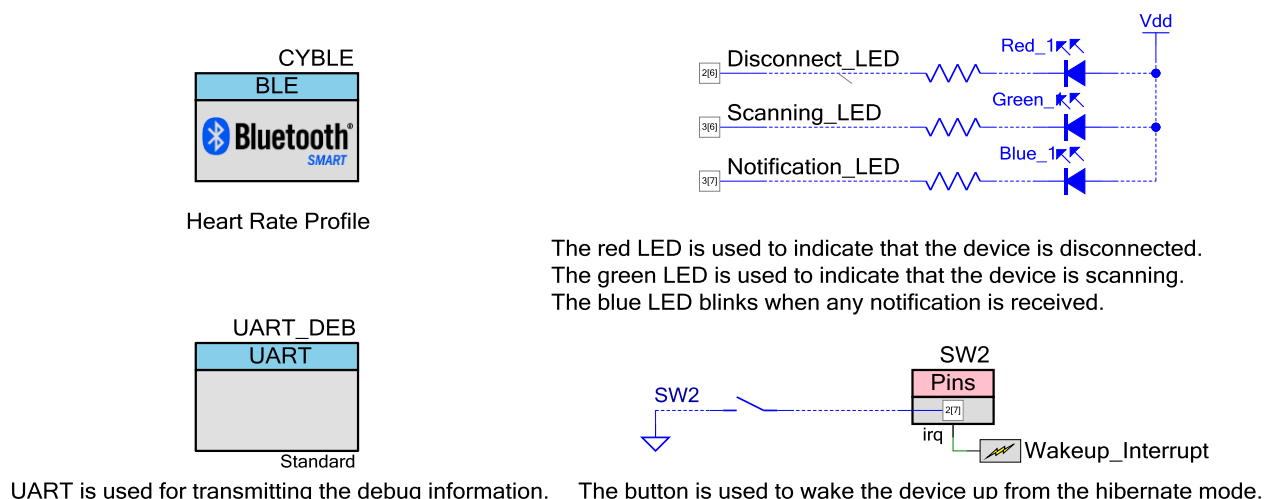


Figure 1. Top design schematic

The BLE component is configured as Heart Rate Collector.

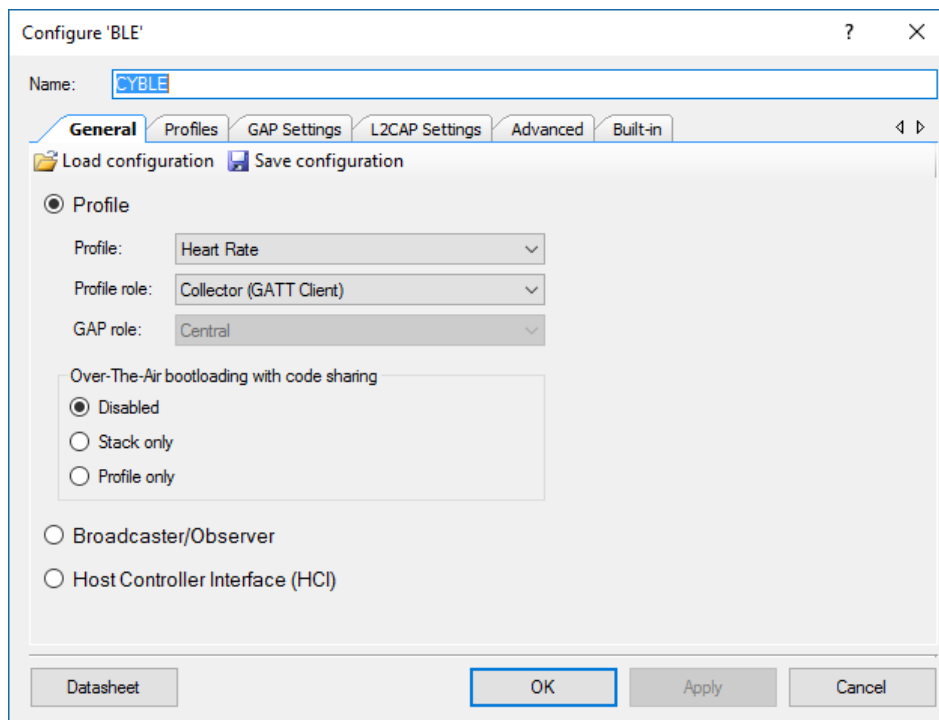


Figure 2. BLE configuration

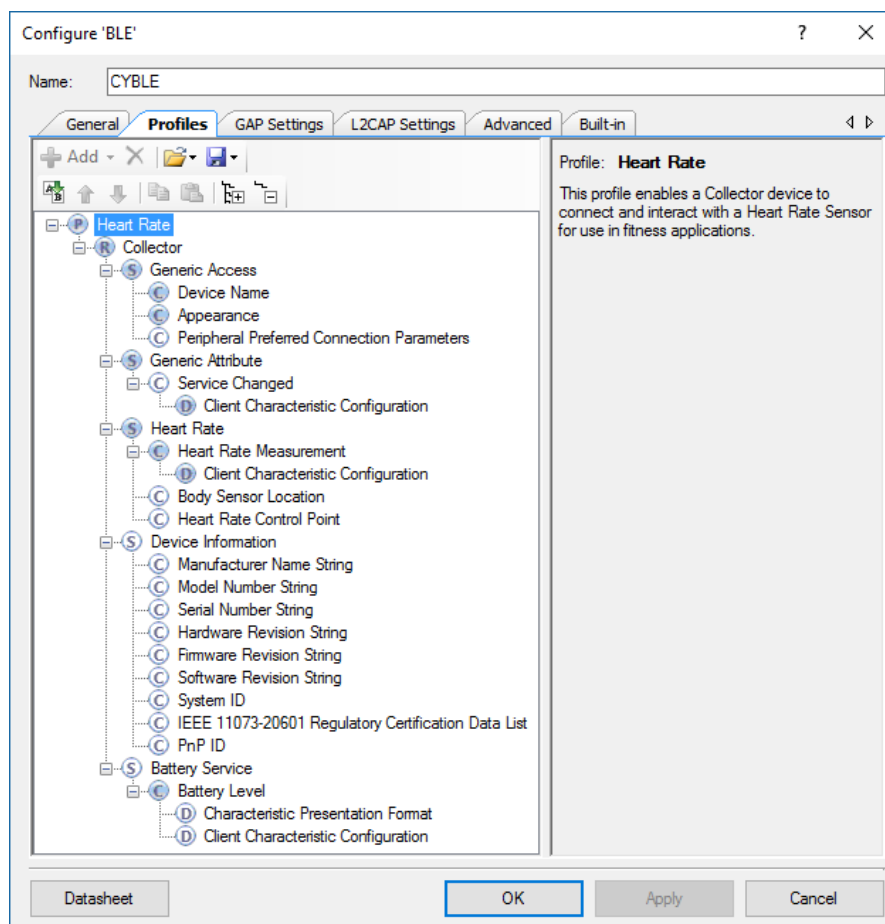


Figure 3. GATT settings

Configure 'BLE'

Name: CYBLE

General Profiles **GAP Settings** L2CAP Settings Advanced Built-in

General

- Central role
- Scan settings
- Connection parameters
- Security

Device address

Public address (Company ID - Company assigned): 00A050-000007

☐ Silicon generated "Company assigned" part of device address

You can use the user configuration section of the supervisory flash to store the public device address for mass production.

Device name:

Appearance: Unknown

Attribute MTU size (bytes): 23

Link layer max TX payload size (bytes): 27

Link layer max RX payload size (bytes): 27

Adv/Scan TX power level (dBm): 0

Connection TX power level (dBm): 0

☐ Enable Link Layer Privacy

Restore Defaults

Datasheet OK Apply Cancel

Figure 4. GAP settings

Configure 'BLE'

Name: CYBLE

General Profiles **GAP Settings** L2CAP Settings Advanced Built-in

General

- Central role
- Scan settings**
- Connection parameters
- Security

Discovery procedure: General

Scanning state: Active

Filter policy: All

☒ Duplicate filtering

Scan parameters

Fast scan parameters:

Scan window (ms): 30

Scan interval (ms): 30

☒ Scan timeout (s): 10

☒ Slow scan parameters:

Scan window (ms): 1000

Scan interval (ms): 1280

☒ Scan timeout (s): 150

Restore Defaults

Datasheet OK Apply Cancel

Figure 5. GAP settings->Scan settings

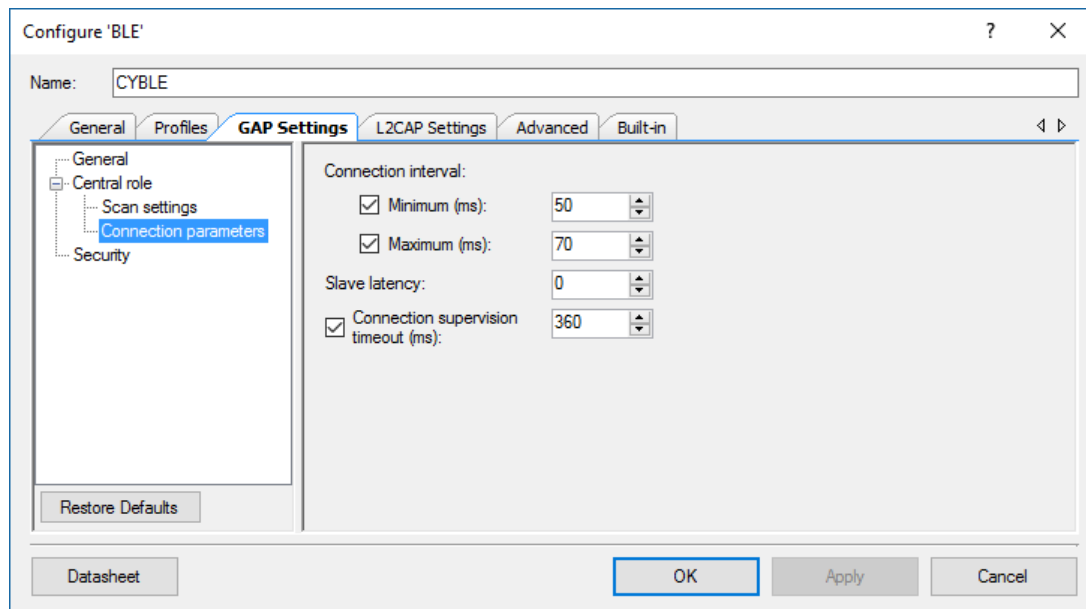


Figure 6. GAP Settings->Connection parameters

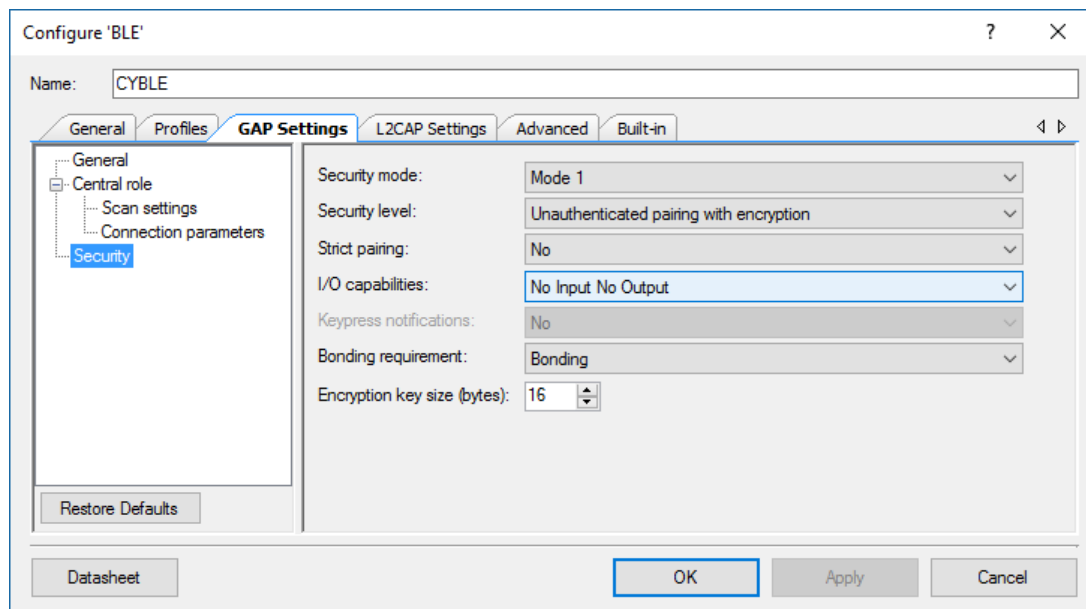


Figure 7. Security settings

Project Description

The project demonstrates the BLE workflow procedures like scanning, discovering, connecting, writing/reading characteristics/descriptors, receiving notifications etc. It is designed to work in pair with the BLE Heart Rate Sensor Example Project.

The project is designed so there is no need to initiate any of mentioned actions manually – it automatically starts the BLE stack, then when stack is on (STACK_ON event is received) the scanning GAP procedure is initiated, then it receives and parses advertisement data. The green LED is blinking while the device is scanning. Once it finds out that there is Heart Rate Service UUID in the advertisement packet then it immediately connects to that device and starts to discover all primary services which are supported (configured in the GATT tab): in our case they are: Generic Access (GAP) and Attribute (GATT) services, then Heart Rate (HRS), Battery (BAS) and Device Information Service (DIS). Then the project discovers included services (which may be secondary) and characteristics of each mentioned above primary services. Then it discovers descriptors of each service characteristic which can have descriptors.

After the discovery process (when the DISCOVERY_COMPLETE event is received) project sends a request to read the Body Sensor Location characteristic and waits for HRSC_BSL_READ_RESPONSE event in the heart rate profile's callback (HeartRateCallBack()). In this event project indicates received Body Sensor Location value and enables the Heart Rate Measurement Notification. The notifications come approximately once a second. The project also enables the Battery Level notification, which comes immediately after enabling and then when battery level changes.

The red LED is turned on after disconnection to indicate that no Server is connected to the device. On disconnection event the device immediately starts to scan peripherals. When the Central device connects successfully, both red and green LEDs are turned off.

After 160 seconds timeout, if no peripheral device has been connected, the Heart Rate Collector stops discovering, a red LED is turned on indicating the disconnection state and the system enters into the hibernate mode. Press the mechanical button on CY8CKIT-042 BLE (SW2) to wake up the system and start discovering.

Expected Results

The project is intended to work in pair with the BLE Heart Rate Sensor Example Project.

However, it can work with any other BLE heart rate sensor (e.g. HRM-10 chest belt) which exposes Heart Rate and Battery Services.

When in connection with any Heart Rate sensor device, the project indicates the received heart rate notifications through UART.

Also the LEDs are blinking as described in Project Description section.

The example log is shown below:

```
BLE Heart Rate Collector Example Project
Stack Version: 1.0.0.169
EVT_STACK_ON
Start Scan
EVT_GAPC_SCAN_START_STOP, state: 3
SCAN_PROGRESS_RESULT: peerAddrType - 0, peerBdAddr - 0: 00a050000006, rssi - -67 dBm, data - 02 01 06 12 09 48 65 61 72 74 20 52 61 74 65 20 53 65 6e 73 6f 72 05 02 0d 18 0a 18 This device contains Heart Rate Service
Stop Scanning, waiting for Scanning event
SCAN_PROGRESS_RESULT: peerAddrType - 0, peerBdAddr - 0: 00a050000006, rssi - -68 dBm, data - 12 09 48 65 61 72 74 20 52 61 74 65 20 53 65 6e 73 6f 72 03 02 0d 18 This device contains Heart Rate Service
Stop Scanning, waiting for Scanning event
EVT_GAPC_SCAN_START_STOP, state: 5
Connect to the Device: 0
EVT_HCI_STATUS 12
EVT_GATT_CONNECT_IND: attId 0, bdHandle 3
EVT_GAP_DEVICE_CONNECTED: 3
Authentication request is sent
EVT_GAP_AUTH_COMPLETE: security:1, bonding:1, ekeySize:10, authErr 0
Start Discovery
EVT_GAP_ENCRYPT_CHANGE: 1
EVT_GATTC_DISCOVERY_COMPLETE
Body Sensor Location Read Request is sent
Body Sensor Location: WRIST (2)
HRM CCCD Write Request is sent
Heart Rate Measurement Notification is Enabled
Heart Rate Notification: Heart Rate: 72 EnergyExpended: 0 RR-Interval 0: 833
HRM CCCD Read Request is sent
HRM CCCD Read Response: 0001
Heart Rate Notification: Heart Rate: 84 EnergyExpended: 0 RR-Interval 0: 714
Battery Level CCCD Write Request is sent
BAS event: 11f, Battery Level Notification is Enabled
Heart Rate Notification: Heart Rate: 96 EnergyExpended: 0 RR-Interval 0: 625
Heart Rate Notification: Heart Rate: 108 EnergyExpended: 0 RR-Interval 0: 555
Heart Rate Notification: Heart Rate: 120 EnergyExpended: 0 RR-Interval 0: 500 RR-Interval 1: 501
BAS event: 11c, Battery Level Notification: 100
BL CCCD Read Request is sent
BAS event: 11e, BAS descriptor read rsp: 0001
Heart Rate Notification: Sensor Contact is supported but not detected
Heart Rate Notification: Sensor Contact is supported but not detected
Heart Rate Notification: Sensor Contact is supported but not detected
BAS event: 11c, Battery Level Notification: 100
Heart Rate Notification: Heart Rate: 168 EnergyExpended: 0 RR-Interval 0: 357 RR-Interval 1: 358
Heart Rate Notification: Heart Rate: 180 EnergyExpended: 0 RR-Interval 0: 333 RR-Interval 1: 334 RR-Interval 2: 335
Heart Rate Notification: Heart Rate: 192 EnergyExpended: 0 RR-Interval 0: 312 RR-Interval 1: 313 RR-Interval 2: 314
BAS event: 11c, Battery Level Notification: 100
Heart Rate Notification: Sensor Contact is supported but not detected
Heart Rate Notification: Sensor Contact is supported but not detected
```

© Cypress Semiconductor Corporation, 2009-2016. The information contained herein is subject to change without notice. Cypress Semiconductor Corporation assumes no responsibility for the use of any circuitry other than circuitry embodied in a Cypress product. Nor does it convey or imply any license under patent or other rights. Cypress products are not warranted nor intended to be used for medical, life support, life saving, critical control or safety applications, unless pursuant to an express written agreement with Cypress. Furthermore, Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress products in life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

PSoC® is a registered trademark, and PSoC Creator™ and Programmable System-on-Chip™ are trademarks of Cypress Semiconductor Corp. All other trademarks or registered trademarks referenced herein are property of the respective corporations.

Any Source Code (software and/or firmware) is owned by Cypress Semiconductor Corporation (Cypress) and is protected by and subject to worldwide patent protection (United States and foreign), United States copyright laws and international treaty provisions. Cypress hereby grants to licensee a personal, non-exclusive, non-transferable license to copy, use, modify, create derivative works of, and compile the Cypress Source Code and derivative works for the sole purpose of creating custom software and or firmware in support of licensee product to be used only in conjunction with a Cypress integrated circuit as specified in the applicable agreement. Any reproduction, modification, translation, compilation, or representation of this Source Code except as specified above is prohibited without the express written permission of Cypress.

Disclaimer: CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Cypress reserves the right to make changes without further notice to the materials described herein. Cypress does not assume any liability arising out of the application or use of any product or circuit described herein. Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress' product in a life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

Use may be limited by and subject to the applicable Cypress software license agreement.

